


UPDATING THE TOOL


- 1 Visit **AutodiagnosTPMS.com** to download the Autodiagnos TPMS software.
- 2 Open the installation file and follow the on-screen instructions to install the software.
- 3 Connect the tool to your PC with the power ON.




- 4 Open the software, then select the "Update Tool" option.

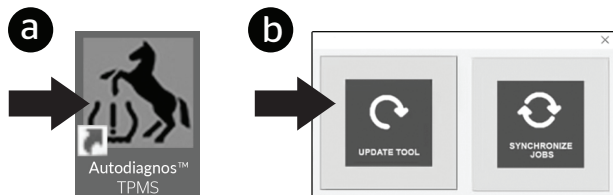

- 5 After 5-10 minutes, the tool will be up-to-date.

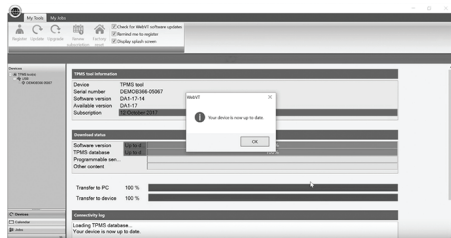


SCANNING SENSORS

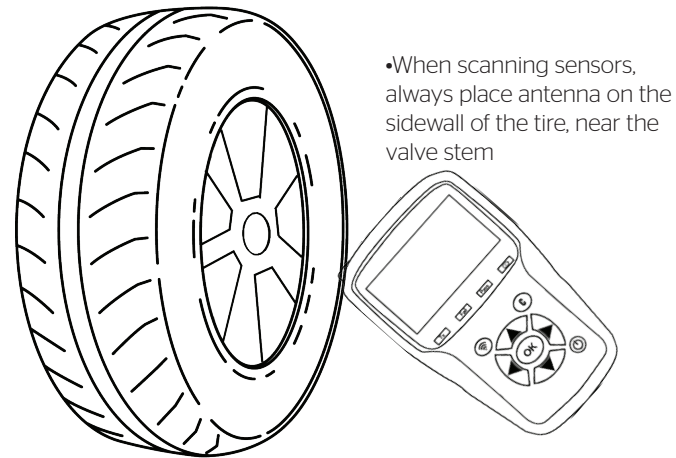
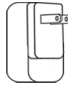
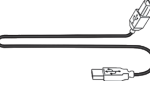




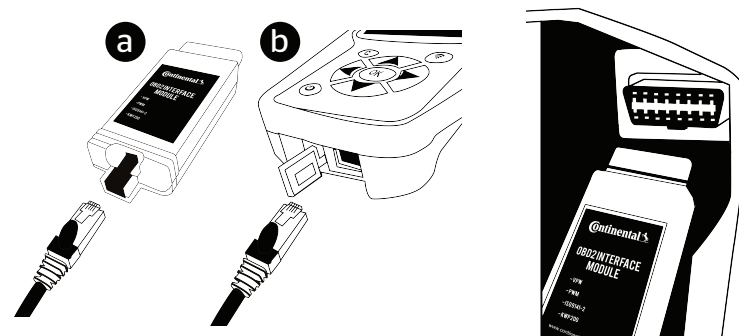

CONNECTING OBDII

- 1 Plug in RJ45 Cable into the OBDII module, then the other end into the tool.
- 2 Plug connected OBDII Module in the ECU port on the vehicle.



KIT CONTENTS

1	TPMS D PN: 29-1000-2417-2-00	
2	24V Charger PN: 29-1000-2417-5-00	
3	USB Cable PN: 29-1000-2417-4-00	
4	RJ45 Cable PN: 29-1000-2426-1-00	
5	OBDII Module PN: 29-1000-2417-3-00	
6	Relearn Magnet PN: 29-1000-2417-6-00	
7	Software CD	

CONTACT SUPPORT

Phone: 800-265-1818


Email: techsupport-us@continental.com

Web: AutodiagnosTPMS.com

Rev.2 5/2020


Continental 

Autodiagnos™ TPMS D

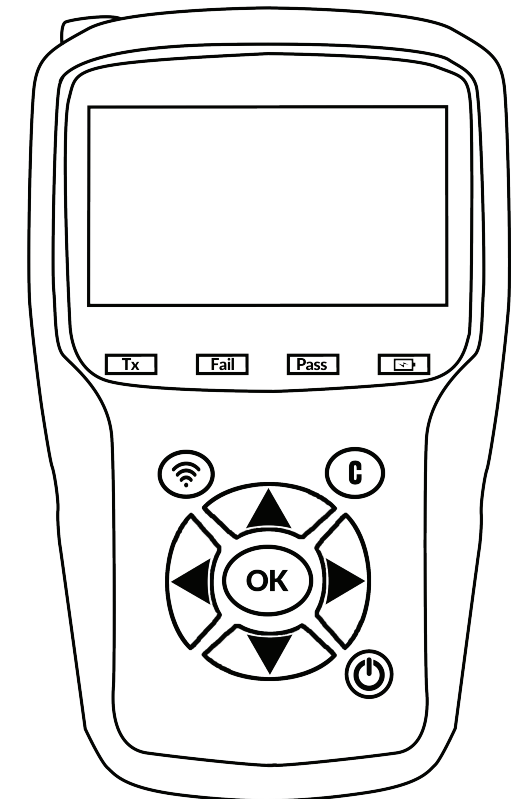


QUICKSTART GUIDE


TOOL CONTROLS

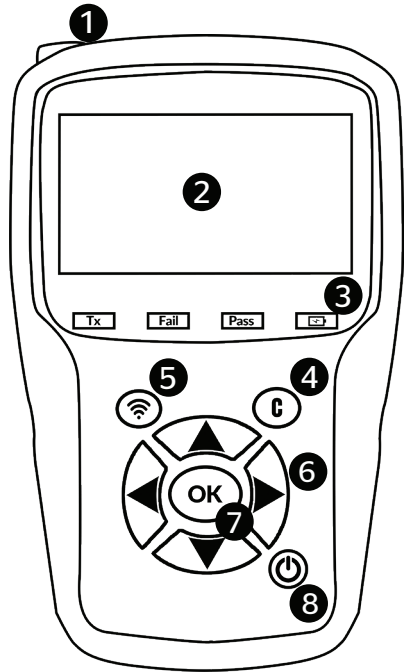

- 1** Antenna
- 2** Display
- 3** Result Lights
 - Triggering
 - Fail
 - Pass
 - Charging
- 4** Cancel Button
- 5** Trigger Button
- 6** Directional Buttons
- 7** OK/Enter Button
- 8** Power Button

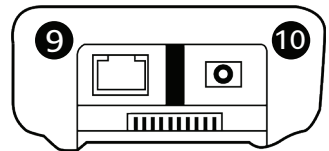

- 9** RJ45 Port
- 10** Charging Port

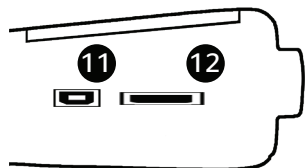

- 11** USB Port
- 12** SD Card Slot

FEATURES & ICONS




REDI-UNLOCK



Prepare REDI-Sensors for installation by unlocking them. Unlock with a press of the trigger button.



SERVICE TPMS

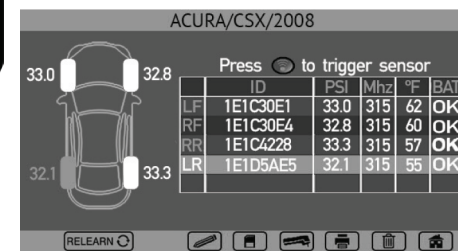

Activate and trigger TPMS sensors. View and perform both manual and OBDII relearn procedures for select vehicles.

FEATURES & ICONS




PROGRAM



Program over 18 different aftermarket sensors in a variety of different ways including create, copy, copy set, and retrieve IDs from ECU.



PART# LOOKUP

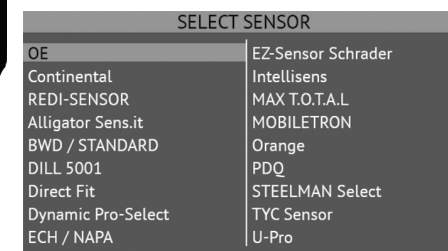


View part numbers for OE, REDI, EZ-Sensor, and more.
Note Some vehicles may have multiple compatible part numbers.

FEATURES & ICONS




PLACARD ADJUST

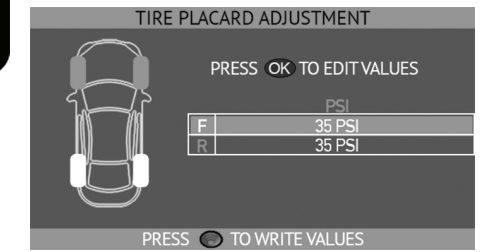

When changing tire sizes or load types. Adjust the internal placard values to match the new set.



TIRE TREAD DEPTH

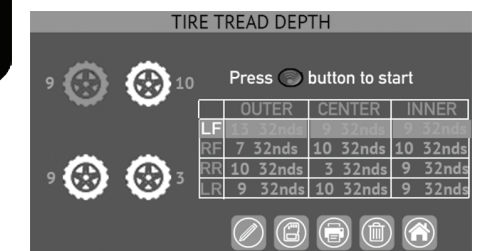

With the optional Tire Tread Depth Gauge, measure tread depth up to 5 tires. Results are color coded to display wear.